

# ROV Systems

## Why does the relative humidity on my Pro 4 go down?

Relative Humidity is defined as the ratio of current water vapor pressure to water saturation vapor pressure. The saturation vapor pressure decreases with increasing temperature so the RH% goes down even though there is no change in the amount of water vapor in the housing.

Unique solution ID: #1121

Author: Tom Glebas

Last update: 2013-01-04 21:31